

DS Fairing Kit – Instructions: Part No. 20086




Kit contents

- 1 x DS fairing, trimmed to standard spec.
- 1 x top hat bracket
- 1x box bracket
- 2x 45x15 L bracket with slot
- 2x 15x25 L bracket
- 2x20x25 L bracket
- 1x top plate with hole
- 1x complete top plate
- 10x fairing clips (only 6 required)
- 2x M4x8mm allen bolt

The main fairing part is semi-permeant and the access to the top of the case to fit the foil is through the removable top plate.




1, Dry fit the fairing, ensure it clips into the tramp track. Once happy with the position mark the cleat cut out with tape to help you re position it. Different cleats will require more of the fairing to be cut out.

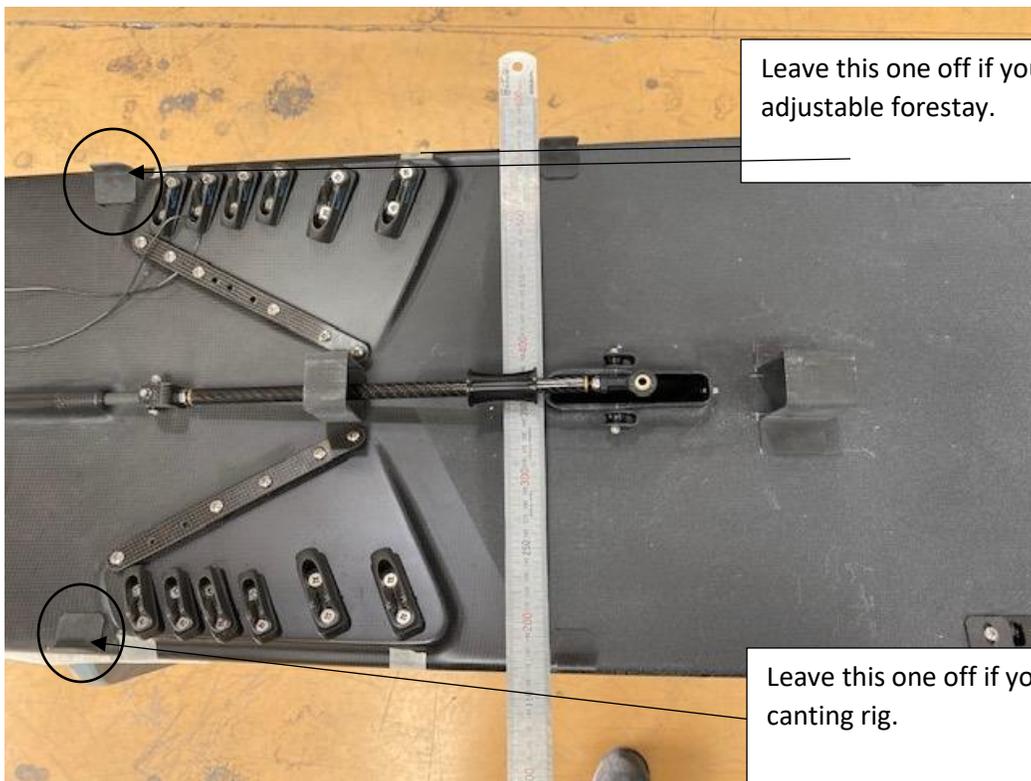

Leave this one off if you have got adjustable forestay.

Leave this one off if you have got canting rig.

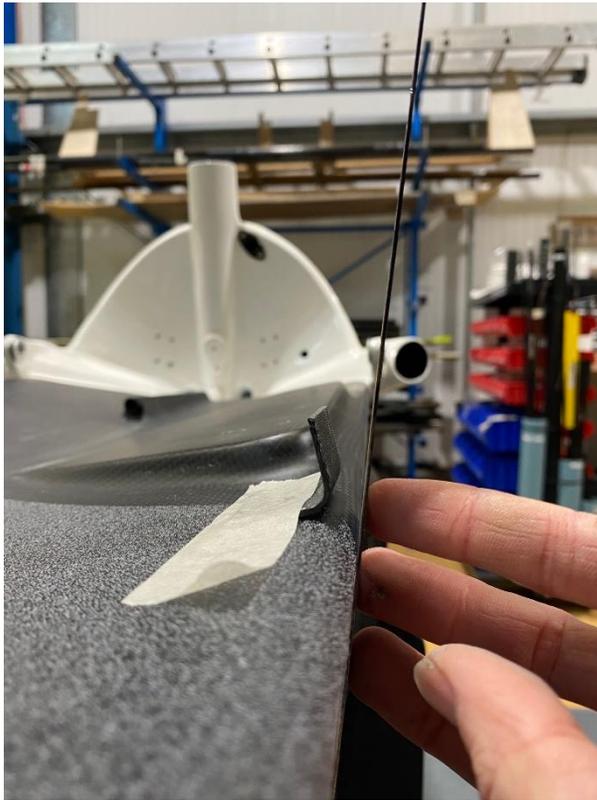

2, Lay out the brackets as per the photo. Please note all L brackets fitted with the shorter dimension vertically

15x25 brackets just in front of the cleat area

20x25 brackets front edge in line with the front of the case

15x45 brackets fixed to the front mainsheet fixing

Box bracket as per photo

Top hat bracket- fwd edge 300mm aft of the most aft screw in the deck organiser, set the brackets 6mm in from the hull edge at the closest point.

Mark these with tape or white pencil.



3, Transfer the bracket position to the hull below the track. Bond the brackets in place with Sikaflex 291i black, allow to cure overnight.



4, Reposition the fairing, mark the holes for the fairing clips

Fwd and aft holes 18mm up from the track and the centre of the bracket

Middle hole 18mm up from the track

Drill 6mm (pilot with a 3-4mm drill first)



5, fit the fairing clips- push the central piece to secure, to release use a small screwdriver to push the central piece through.

Fit the the top plate this clips under the fairing as in the photos, then best secured with a small fixing (M4x8mm allen bolt)

6, The faring will require customising to your fit out, more slots and holes will be needed to be cut out.



The kit comes with the smooth top plate, this can be modified or used if you are keen to modify the foil gearing set up, if not the plate with the cut out will need to be used. Fit the fairing after you have re fitted the tramps.